LINEA-CB-LED Direct/Indirect Center Basket

Installation Guide



IMPORTANT SAFETY INSTRUCTIONS

1. Read carefully before installing fixture. Retain for future reference.




Retrofit Kit

To prevent electrical shock, turn off electricity at fuse box before proceeding.

- 2. Failure to follow instructions may result in serious injury or death.
- 3. Upon receipt the fixture, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the package slip with the fixture label on the housing to assure you have received material.
- 4. This fixture must be wired in accordance with the international electrical code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. Carefully observe the correct grounding procedure under installation section.


Note: Luminaire must be installed before ceiling!

*Deco Digital assumes no responsibility for claims arising out of improper or careless handling or installation of this product.

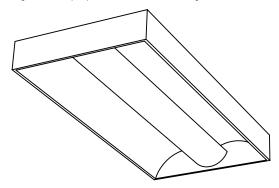

Installation Instructions

- 1. Ensure that power to the luminaire is turned off at the circuit breaker.
- 2. Open center basket on recessed luminaire.

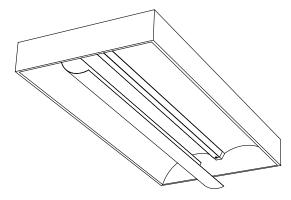

Deco Lighting practices a program of continuous product improvement, and as a result product specifications change frequently. We reserve the right to change product specifications without notice. Contact Deco for the latest product information.


LINEA-CB-LED

Direct/Indirect Center Basket Retrofit Kit


Installation Guide




3. Remove ballast cover by removing the screw at each end of the cover.

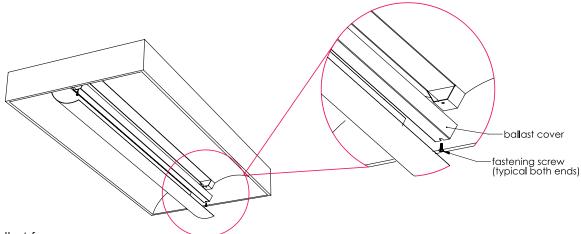

- **4.** Disconnect ballast from power.
- **5.** Cut ballast wires going to the lamp sockets at each end.
- **6.** Install Luminaire modification label in luminaire.
- 7. If necessary remove old ballast.
- **8.** Install LED driver, connecting the power wires to the driver as per the attached wiring diagram. (See Page 3)
- 9. Connect driver to LED boards.
- **10.** Install LED boards and driver cover using the screws that previously held the ballast cover.

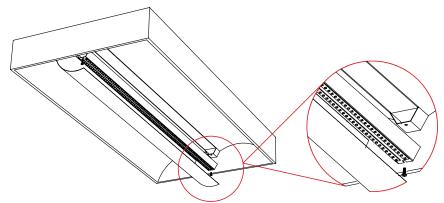

11. Close basket. Turn power on. Energize circuit.

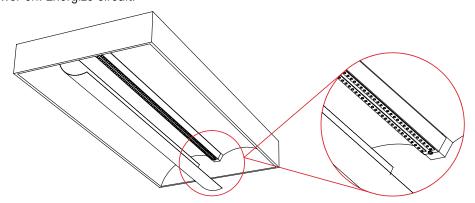

Deco Lighting practices a program of continuous product improvement, and as a result product specifications change frequently. We reserve the right to change product specifications without notice. Contact Deco for the latest product information.

LINEA-CB-LED

Direct/Indirect Center Basket Retrofit Kit

Installation Guide



WIRING DIAGRAM

